

BOOST UTILITY REAR RACK #3 PLUS INSTALLATION

For Benno® Boost **EVO 1,2,3,4** and **EVO 5**

READ CAREFULLY BEFORE INSTALLATION AND USAGE. TO BE INSTALLED BY MECHANIC AT AUTHORIZED BENNO DEALER.

COMPATIBILITY


BOOST EVO 1,2,3,4,5

FOR BOOST **EVOLUTION FINDER** GO TO: BENNOBIKES.COM/BOOST/EVOLUTION




EVO (evolution) replaces model years and refers to design generations.

IMPORTANT: *Notes to mechanic:* See Instructions. Install Benno Boost Utility Rear Rack #3 only on compatible Benno Boost models. Use only original (included) hardware and pre-drilled holes and fittings. Do not mount rear rack to damaged bikes. Do not modify rack or bike, change position or drill new holes as this will void any warranties and/or claims for liability.

Notes to owner: Periodically check to make sure all bolts remain tight as vibrations may loosen them.


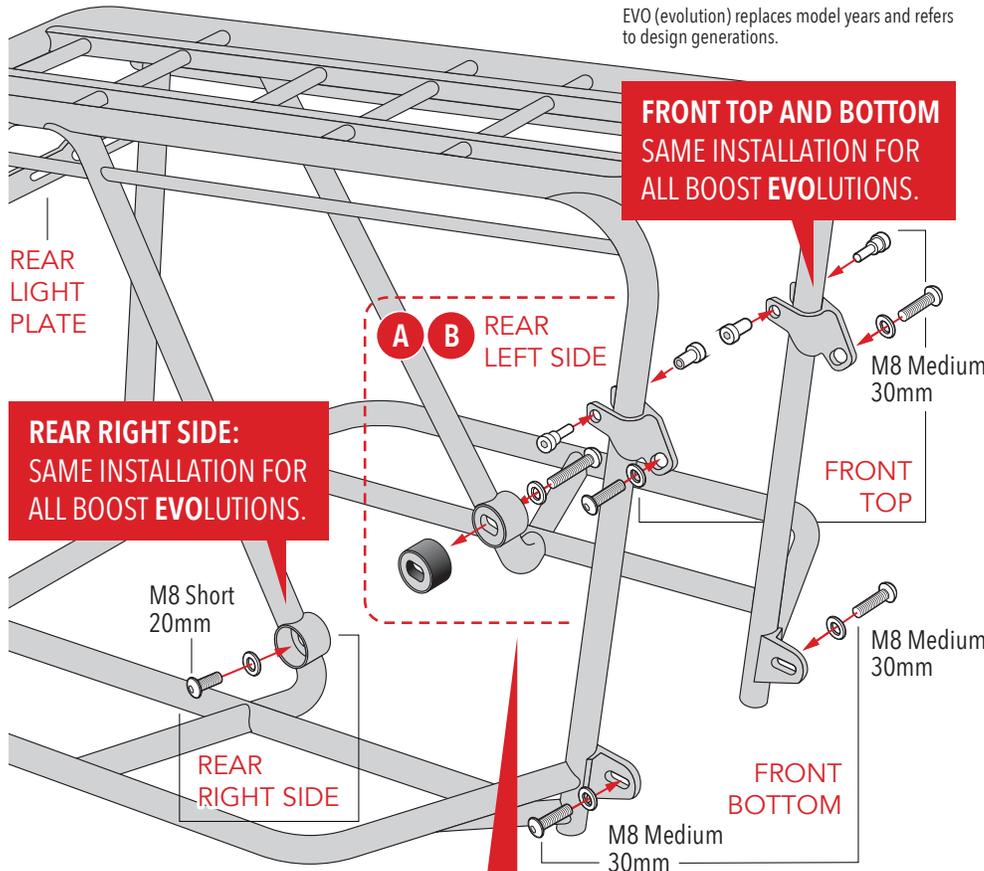


Hardware

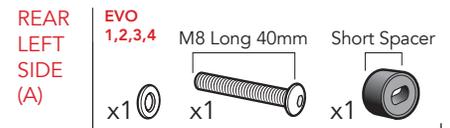


PLEASE NOTE: Select needed hardware according to description below. **Not all hardware included will be used.**

REAR LEFT SIDE: SELECT INSTALLATION OPTION (A OR B) DEPENDING ON YOUR BOOST EVOLUTION AND RACK CONFIGURATION. SEE OPTIONS BELOW. FOR BOOST EVOLUTION FINDER GO TO BENNOBIKES.COM/BOOST/EVOLUTION

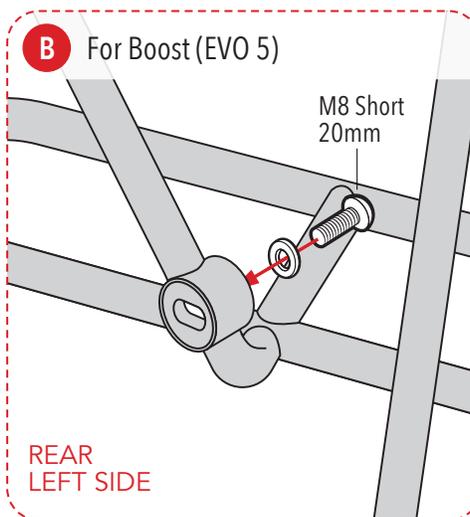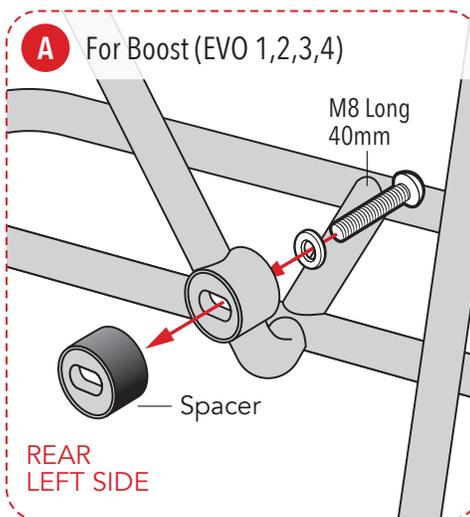

REAR LIGHT PLATE: DISASSEMBLE EXISTING LIGHT PLATE THEN REASSEMBLE WITH NEW RACK IN PLACE

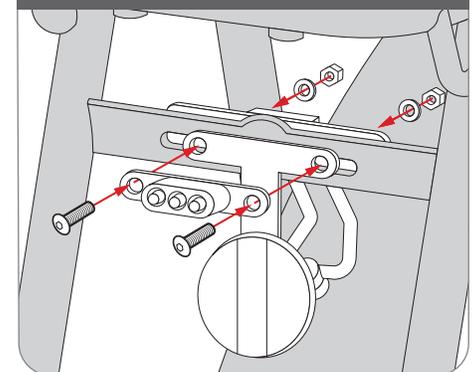


FIRMLY TIGHTEN ALL BOLTS (MAX TORQUE 18Nm).

After installation, take a short test ride in order to check for secure fit and ensure that everything works correctly.

Notes to owner: Periodically check to make sure all bolts remain tight as vibrations may loosen them. Ensure that either Benno Wheel Guards or Utility Pannier Bags remain on the bike while carrying passengers.

**REAR LEFT SIDE:
PLEASE SEE INSTALLATION
OPTION (A OR B) ON
FRONT PAGE**

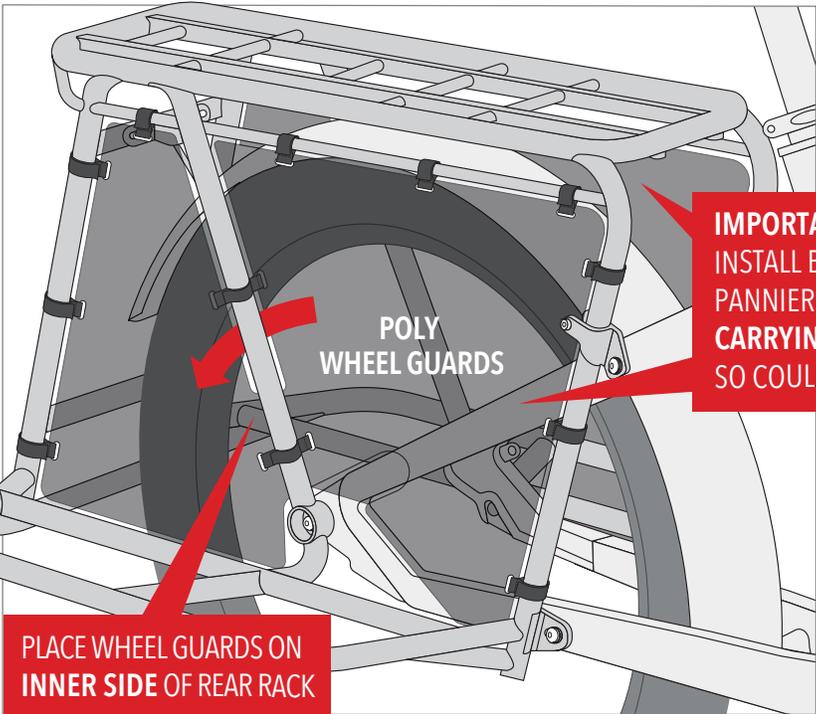

IMPORTANT!
INSTALL BENNO WHEEL GUARDS OR UTILITY PANNIER BAGS ON **BOTH SIDES BEFORE CARRYING PASSENGERS!** FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY!

**PLACE WHEEL GUARDS ON
INNER SIDE OF REAR RACK**



WWW.BENNOBIKES.COM/SUPPORT/BOOST_UTILITY_REAR_RACK_3_PLUS
BOOST_UTILITY_REAR_RACK_3_PLUS_INSTALLATION_MANUAL_JUNE22
COPYRIGHT 2022 BENNO® BIKES LLC

WARNING! **REAR WHEEL MUST BE COVERED!**
INSTALL BENNO WHEEL GUARDS OR UTILITY PANNIER BAGS BEFORE CARRYING PASSENGERS.
FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY!



WHEN CARRYING PASSENGERS, REAR WHEEL MUST BE COVERED! INSTALL BENNO WHEEL GUARDS OR UTILITY PANNIER BAGS. FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY! MAKE SURE THAT NO PARTS OF THE BODY OR CLOTHING COME NEAR MOVING PARTS ON THE BICYCLE, SUCH AS CHAIN, SPOKES, TIRES OR BRAKES. DO NOT STAND ON SIDELoadERS. MAX SIDE LOAD IS 15KG/35LB EACH SIDE. HOWEVER, COMBINED RACK LOAD (DECK+SIDES) NOT TO EXCEED 60KG/130LB. FASTEN CARGO SECURELY AND MAKE SURE ALL STRAPS AND HOOKS ARE TIGHTENED.