


REMIDEMI JUMP SEAT REAR RACK INSTALLATION

For Benno® RemiDemi EVO 1 (Steel Frame Only)

READ CAREFULLY BEFORE INSTALLATION AND USAGE. TO BE INSTALLED BY MECHANIC AT AUTHORIZED BENNO DEALER.

Hardware

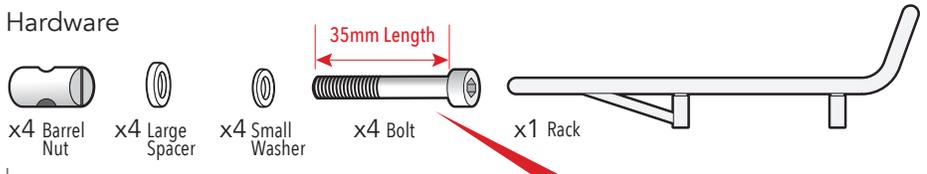

Compatible with:

- Benno City Pannier Bags (RemiDemi Pannier Plates needed)
- Benno RemiDemi Passenger Kit
- Most Racktime®/Snapit® accessories
- Single Yepp® EasyFit baby seat without adaptor
- Other side clamping baby seats (confirm with manufacturer)
- Ortlieb® Pannier Bags with 20mm adapter (RemiDemi Pannier Plates needed)

Max load: 85lbs/40kg

Dimensions: Deck 18.5cm x 45cm (WxL)

Tubing diameter: 19mm (outside loop)

IMPORTANT:
35mm BOLT LENGTH
USE ONLY FOR REMIDEMI EVO 1
(STEEL FRAME)

IMPORTANT: Notes to mechanic: See Instructions. Install Benno RemiDemi Jump Seat Rear Rack only on compatible Benno RemiDemi models. Use only original hardware (included) and pre-drilled holes and fittings. Do not mount Jump Seat Rear Rack to damaged bikes. Do not modify any parts or bikes, change position or drill new holes as this will void any warranties and/or claims for liability.

Step 1: Locate the two black rear rack cross bars on your RemiDemi.

Step 2: Remove both cross bars by removing the four nuts and bolts as shown in picture (2). Save removed cross bars and hardware in case you are planing to reinstall them in the future.

Step 3: Now install RemiDemi Jump Seat Rear Rack by inserting all four barrel nuts into the forward facing holes as shown in picture (3). Rotate the slots of the barrel nuts into a **vertical** position using a flat screwdriver.


Next place a large spacer on each of the four small platform brackets before lowering rack down as shown in picture (3).





Step 4: Now insert all four bolts (using the small washers) from the bottom upwards through the bracket (and large spacer) into the rack as shown in picture (4). Carefully hand-tighten each bolt until you can feel that it has screwed into the barrel nut. Adjust position of rack as needed before securely tighten all four bolts.

Step 5: After installation, take a short test ride in order to check for secure and tight fit and ensure that everything works correctly.

Notes to owner: Periodically check to make sure all bolts remain tight as usage and vibrations may loosen them.

IMPORTANT: WHEN CARRYING PASSENGERS, REAR WHEEL MUST BE COVERED! INSTALL BENNO REMIDEMI WHEEL GUARDS, SEAT PAD AND FOOT PEGS. FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY!

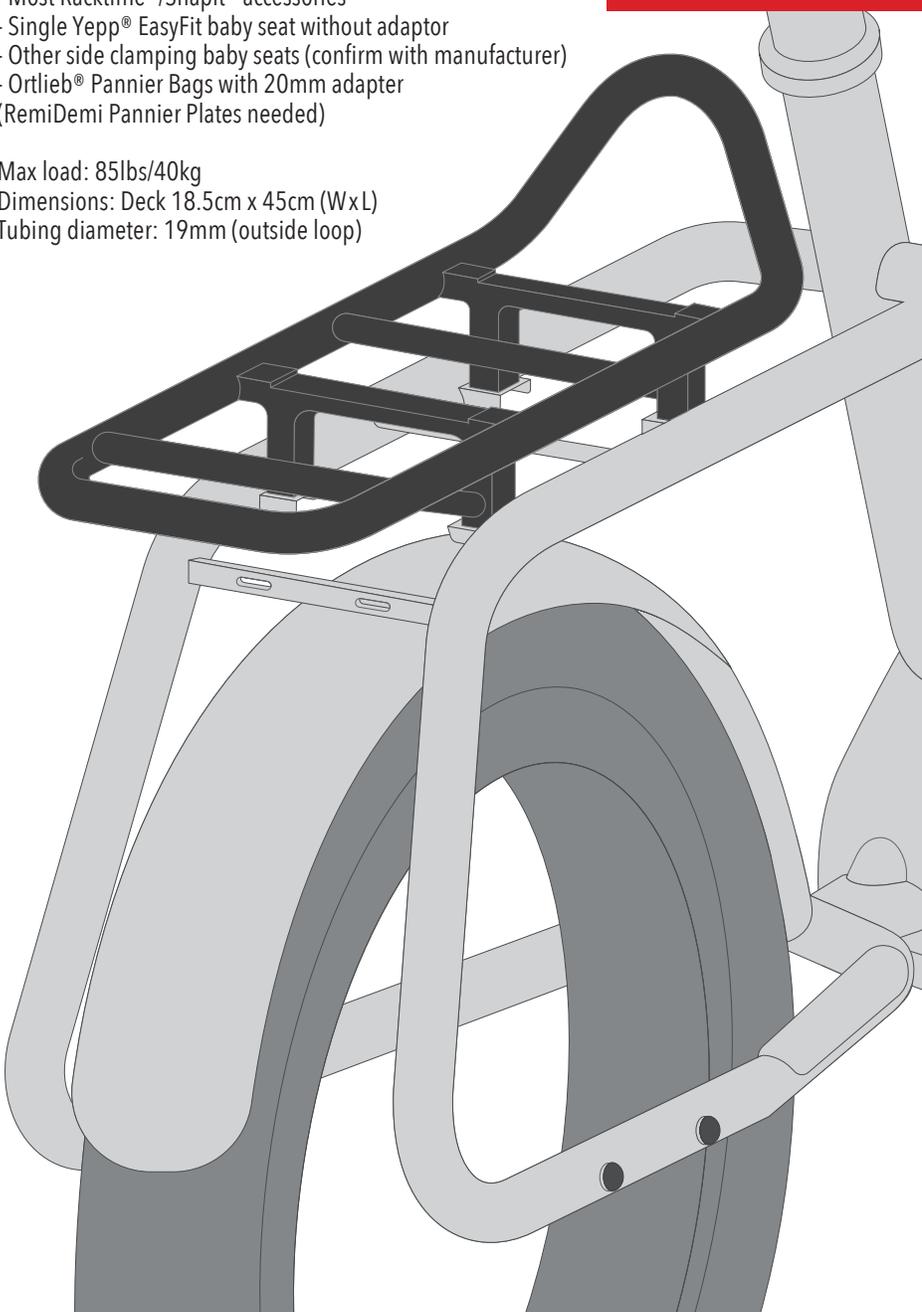

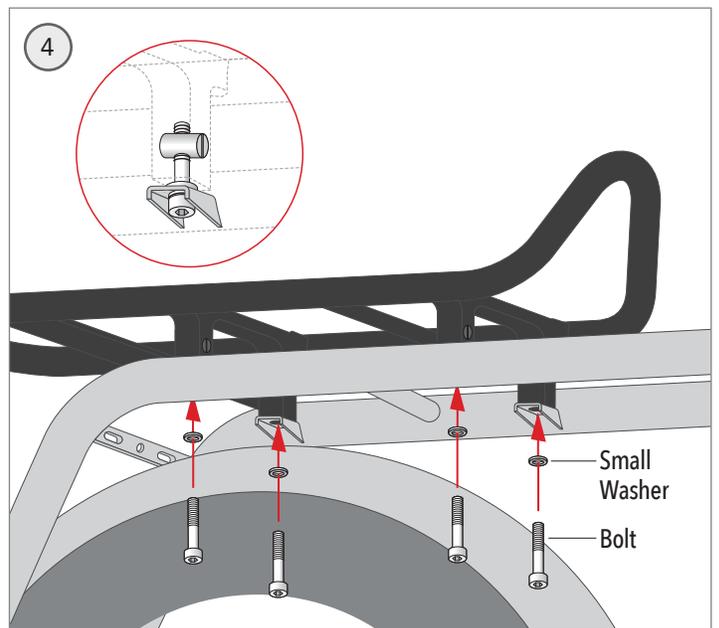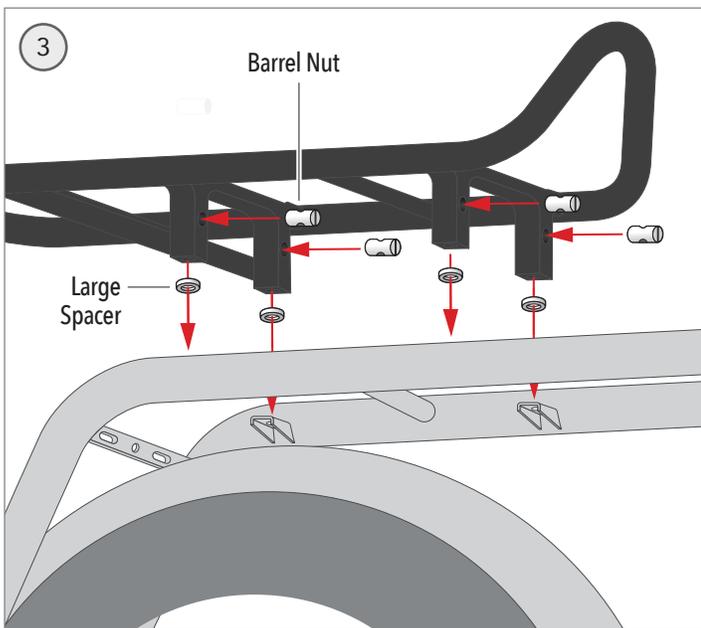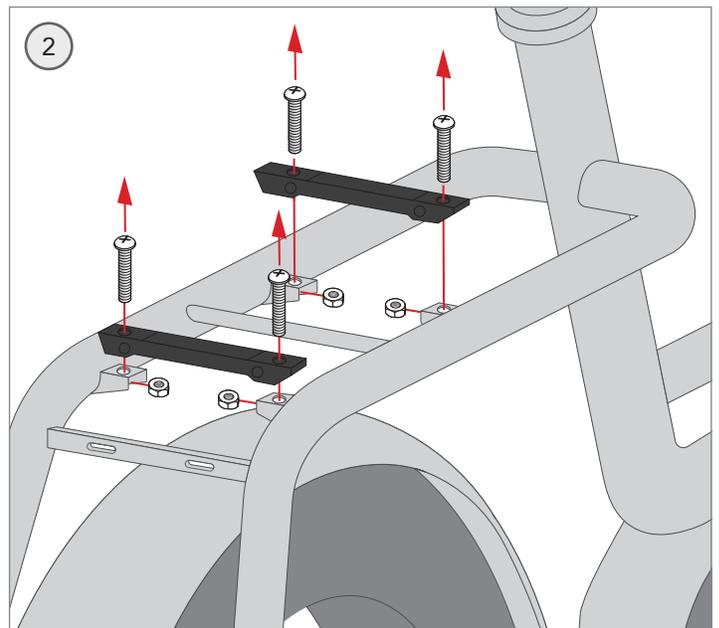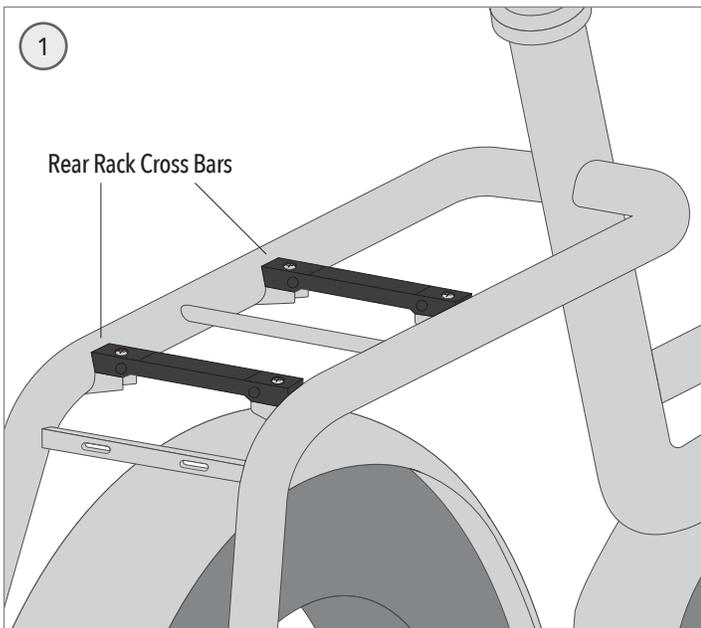

WARNING! **REAR WHEEL MUST BE COVERED!**
INSTALL REMIDEMI WHEEL GUARDS, SEAT PAD AND FOOT PEGS BEFORE CARRYING PASSENGERS.
FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY!



WHEN CARRYING PASSENGERS, REAR WHEEL MUST BE COVERED! INSTALL BENNO REMIDEMI WHEEL GUARDS, SEAT PAD AND FOOT PEGS. FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY! MAKE SURE THAT NO PARTS OF THE BODY OR CLOTHING COME NEAR MOVING PARTS ON THE BICYCLE, SUCH AS CHAIN, SPOKES, TIRES OR BRAKES. DO NOT EXCEED TOTAL MAX GROSS WEIGHT OF THE BIKE AND/OR RACK MAX LOAD.