




UTILITY FRONT TRAY NEO INSTALLATION

For Benno® Boost (EVO 4 and Later), 46er, RemiDemi (EVO 2 and Later), RemiDemi XL

READ CAREFULLY BEFORE INSTALLATION AND USAGE. TO BE INSTALLED BY MECHANIC AT AUTHORIZED BENNO DEALER.

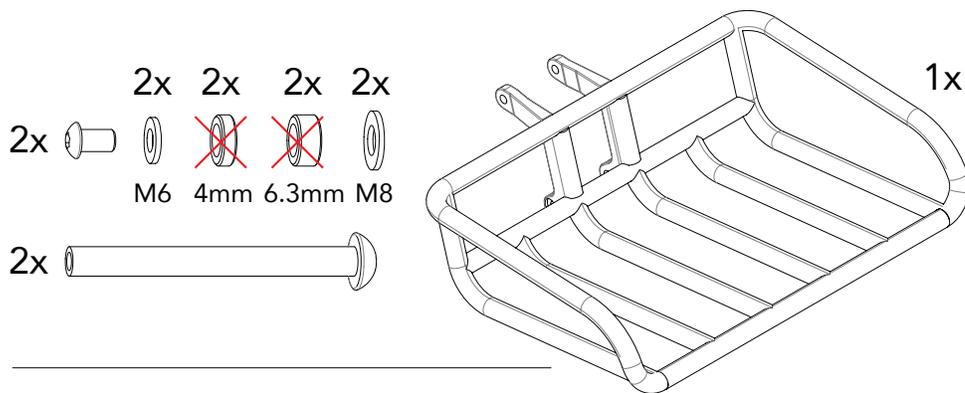

IMPORTANT: For installation on **BOOST EVO 4 and later, 46ER, REMIDEMI EVO 2 and later, and REMIDEMI XL,** the 4mm and 8mm spacers are **not** required.

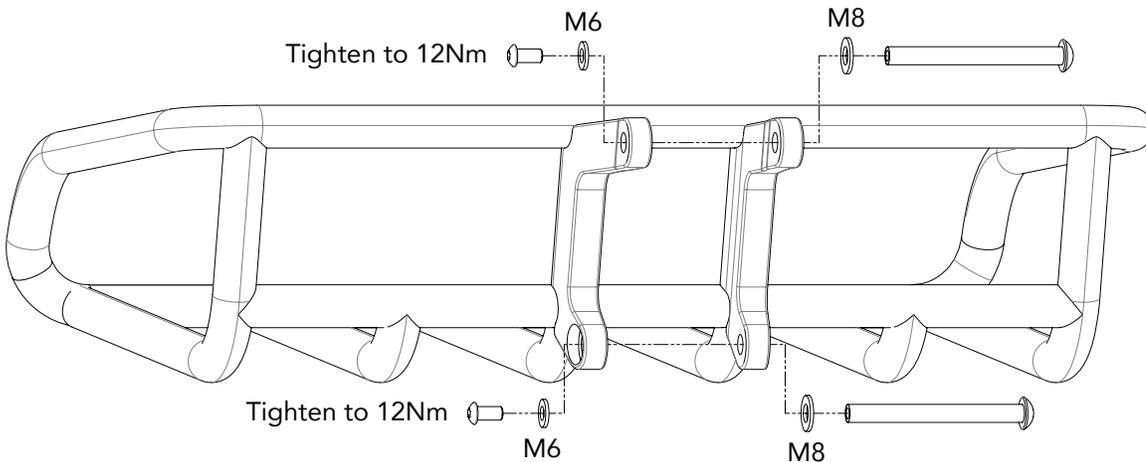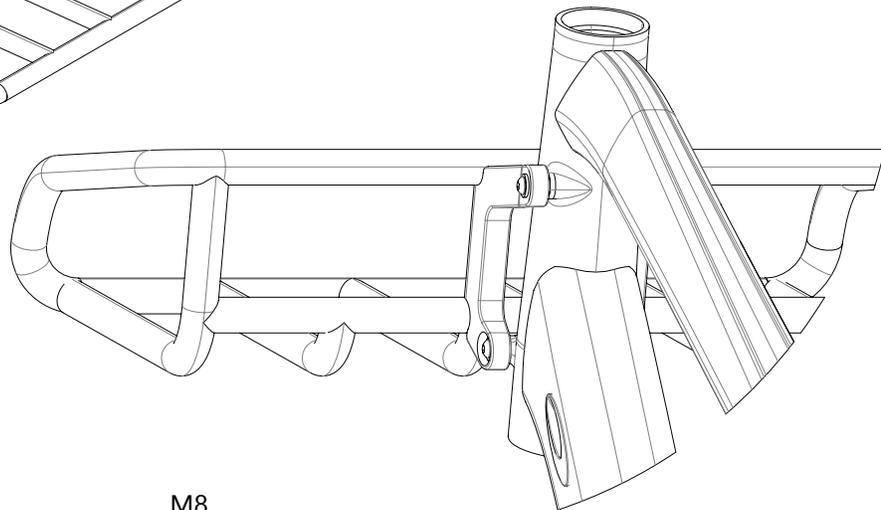


Notes to Mechanic: See instructions for installation. Install the Utility Front Tray Neo only on compatible Benno bikes. Do not mount the tray on damaged bikes. Use only original Benno parts. Do not modify the front tray or hardware, change its position, or drill holes, as this will void any warranties and/or claims for liability. **Notes to Owner:** Periodically check to ensure the front tray is securely attached. Regularly inspect for any damage to prevent detachment while riding.

WARNING! THIS BENNO FRONT TRAY IS DESIGNED FOR CARGO ONLY—**NO PASSENGERS**. SECURE YOUR LOAD FIRMLY AND ENSURE SUFFICIENT CLEARANCE TO THE FRONT WHEEL AND HEADLIGHT. DO NOT EXCEED THE MAXIMUM LOAD INDICATED ON THE TRAY OR THE MAXIMUM GROSS WEIGHT OF THE BIKE LISTED ON THE LOWER SEAT TUBE. WHEN USING MIK ACCESSORIES, ENSURE THE MIK SYSTEM IS PROPERLY INSTALLED AND SECURELY LOCKED BEFORE USE. CHECK ALL CONNECTIONS REGULARLY FOR TIGHTNESS. **FAILURE TO FOLLOW THESE INSTRUCTIONS, IMPROPER INSTALLATION, MISUSE, OR OVERLOADING MAY RESULT IN DAMAGE, INJURY, OR DEATH.**

UTILITY FRONT TRAY NEO INSTALLATION

For Benno® Boost (EVO 1,2,3), eJoy, eScout, RemiDemi (EVO 1) and Carry On

READ CAREFULLY BEFORE INSTALLATION AND USAGE. TO BE INSTALLED BY MECHANIC AT AUTHORIZED BENNO DEALER.

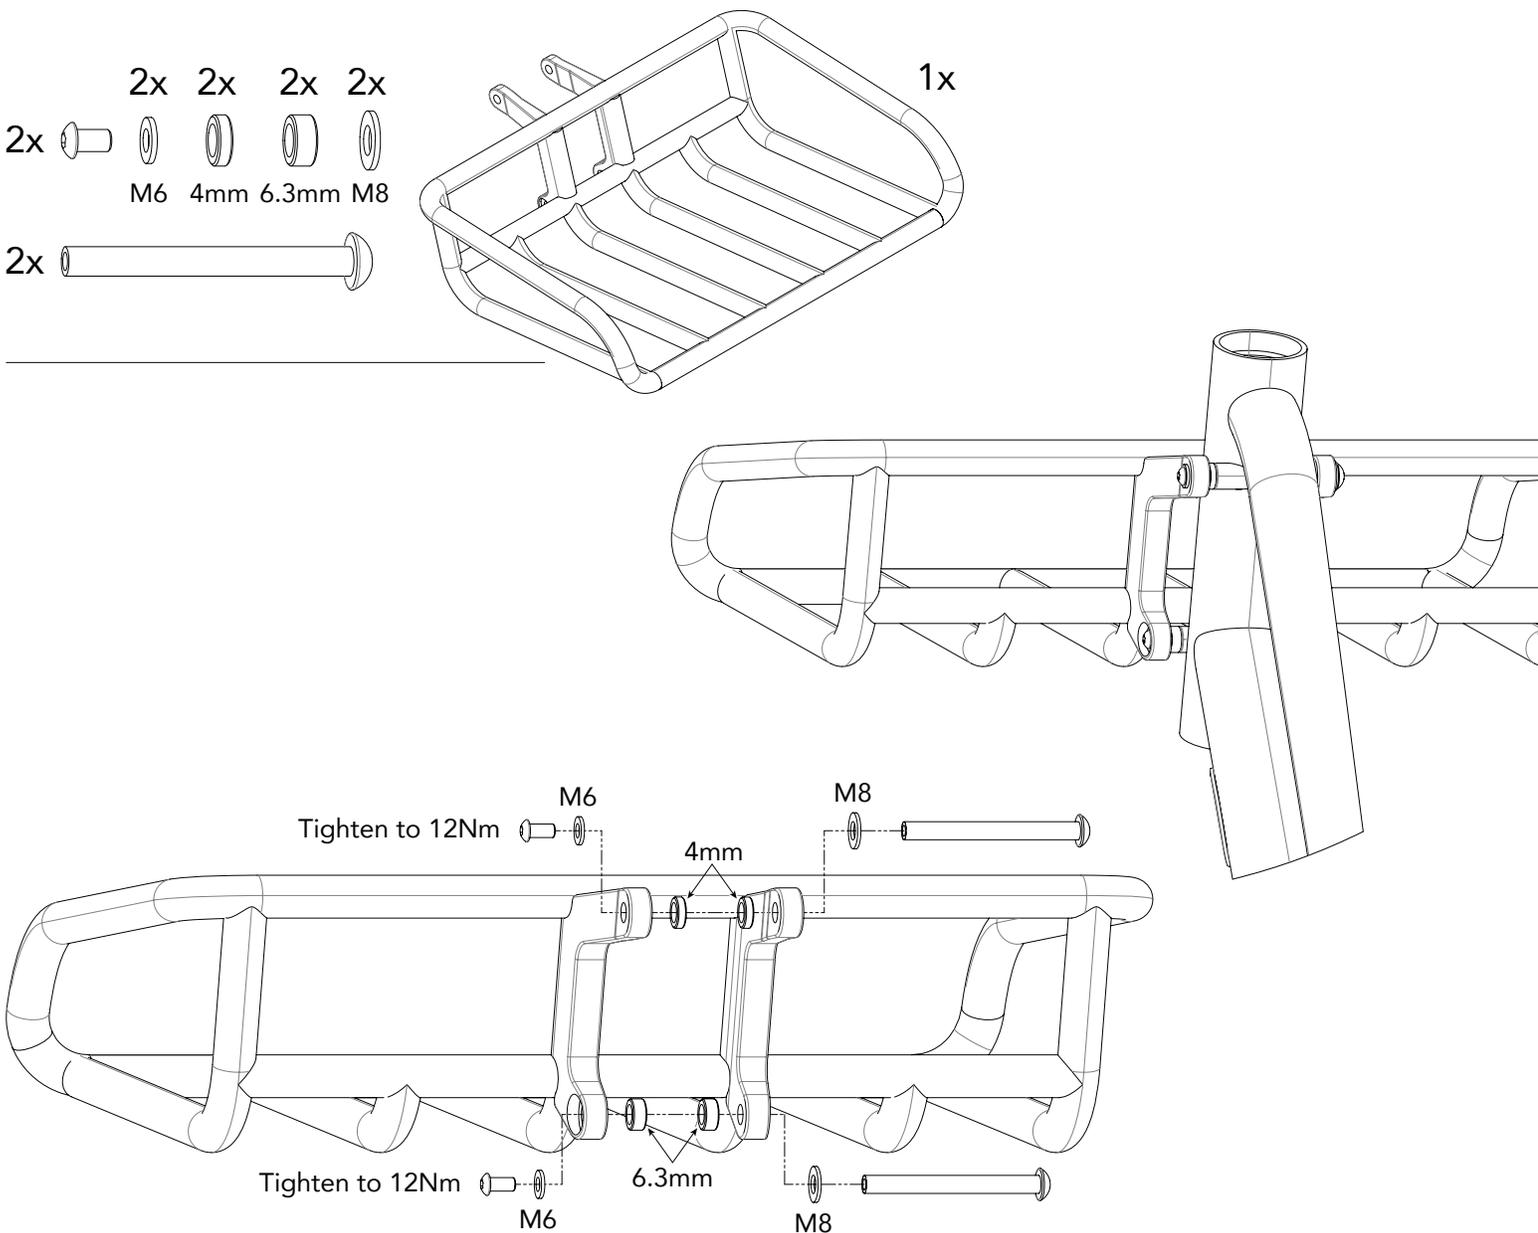

Notes to Mechanic: See instructions for installation. Install the Utility Front Tray Neo only on compatible Benno bikes. Do not mount the tray on damaged bikes. Use only original Benno parts. Do not modify the front tray or hardware, change its position, or drill holes, as this will void any warranties and/or claims for liability. **Notes to Owner:** Periodically check to ensure the front tray is securely attached. Regularly inspect for any damage to prevent detachment while riding.

WARNING! THIS BENNO FRONT TRAY IS DESIGNED FOR CARGO ONLY—**NO PASSENGERS**. SECURE YOUR LOAD FIRMLY AND ENSURE SUFFICIENT CLEARANCE TO THE FRONT WHEEL AND HEADLIGHT. DO NOT EXCEED THE MAXIMUM LOAD INDICATED ON THE TRAY OR THE MAXIMUM GROSS WEIGHT OF THE BIKE LISTED ON THE LOWER SEAT TUBE. WHEN USING MIK ACCESSORIES, ENSURE THE MIK SYSTEM IS PROPERLY INSTALLED AND SECURELY LOCKED BEFORE USE. CHECK ALL CONNECTIONS REGULARLY FOR TIGHTNESS. **FAILURE TO FOLLOW THESE INSTRUCTIONS, IMPROPER INSTALLATION, MISUSE, OR OVERLOADING MAY RESULT IN DAMAGE, INJURY, OR DEATH.**